

2018-Present Phaeton Entry Pad Lock/Unlock

To UNLOCK

ALL DOORS: 1. Enter access code
2. Press and Release the 7/8 key

ENTRANCE DOOR: 1. Enter access code
2. Press and Release the 1/2 key

COMPARTMENT DOORS: 1. Enter access code
2. Press and Release the 3/4 key

To LOCK ALL DOORS: 1. Hold the 1/2 key

Your Authority Code is XXXXXXXXXX

Changing the Door Access Code

1. Hold down the 5/6 key on the keypad for about 5-8 seconds until a confirmation beep is heard (key pad will start flashing)
2. Enter AUTHORITY CODE (code set at factory: ___ ___ ___ ___) this code is written on instruction manual supplied with information pack. (It is also written on keyless module.)
3. Press and Release the 1/2 key then put in ANY new 5 digit code. (birthday, etc)
4. Re-enter the new 5 digit code.
5. New code is ready to use ☺
6. Write your new number here: _____