

XC COMBO QUICK OPERATION GUIDE

QR-RV

Before setting the controls, make sure...

- the drum is loaded correctly (see 'Load Sizes' on this page) and the door is CLOSED,
- laundry aids have been added to the dispenser drawer (see 'Laundry Aids' on this page),
- the ON/OFF button has been pressed, so power is ON,
- and the DOOR LOCK LED is FLASHING - if it isn't, press and HOLD the START button to RESET controls.

WD2100XC/XCP, WDC7100XC

LOAD SIZES

Use the chart below to help you load the drum. **Never load the drum more than 1/2 to 2/3 to dry.**

Full to WASH

1/2 Full to DRY

| WASHING | Fabric Type | Load lbs. |
|---------|-------------|-----------|
| | Cottons | 2 to 15 |
| | Synthetics | 2 to 9 |
| | Delicates | 2 to 8 |
| | Wools | 2 to 3 |
| DRYING | Fabric Type | Max lbs. |
| | ALL TYPES | 8 to 11 |

LAUNDRY AIDS

Pull open the dispenser drawer and add laundry aids to the correct compartments. When finished, close the drawer.

'Max Line' Bleach (with bin)
1 to 2 Tablespoon(s) PreWash Detergent (without bin)


1 to 2 Tablespoon(s) Powder (HE) HIGH EFFICIENCY Detergent (or liquid equivalent)

1 to 2 Tablespoon(s) Liquid Fabric Softener

IMPORTANT

ALWAYS USE A HIGH EFFICIENCY (HE) DETERGENT. Failure to do so could result in decreased cycle performance and damage to your appliance.

Specially formulated, all natural **Splendide HE Laundry Powder** available, see next page.

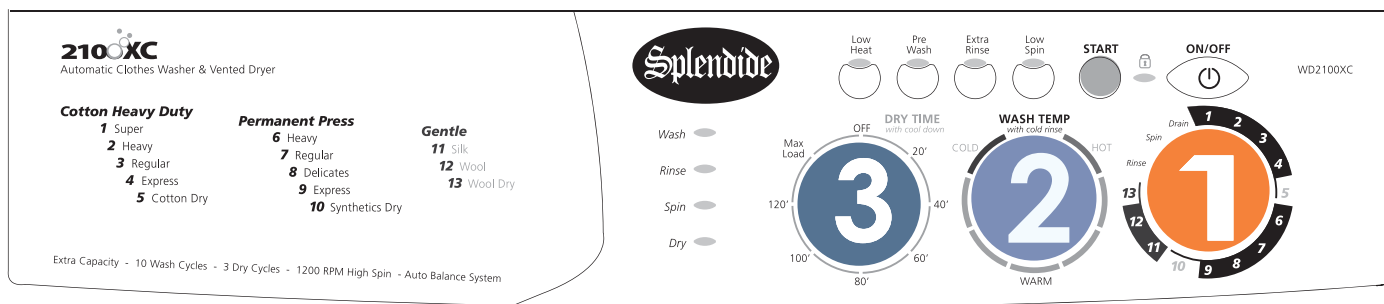

Select any wash cycle using the Cycle Selector (1).

To DRY ONLY, select one of the three dry cycles: 5, 10 or 13.

- **TIP** Refer to the Cycle Key printed on the dispenser drawer to help choose a cycle. Pick a cycle that best describes both the type of fabric (Cotton, Permanent Press, or Wool) and degree of soil for the load.
- **TIP** Select Wool Dry ONLY when drying 100% wool fabrics.



Select a wash water temperature using the WASH TEMP knob (2).

To further customize the cycle, press one or more of the option buttons (Low Heat, Pre Wash, Extra Rinse or Low Spin).

- **TIP** Rinse temperatures are ALWAYS COLD.
- **TIP** Not all options or combinations of options available in all cycles. If an incompatible button is pressed, it's LED will flash QUICKLY, then go black to indicate the option is not available.



Select the length of drying time using the DRY TIME knob (3).

If a wash cycle is selected, Splendide will automatically start the dry cycle when the wash cycle is finished. To WASH ONLY, leave the DRY TIME knob (3) in the 'OFF' position.

- **TIP** USE 'MAX DRY' (180 minutes) for 11lb. loads.
- **TIP** The DRY LED will flash whenever the DRY TIME knob is NOT in the 'OFF' position to indicate a dry time has been set.



Press the START button.

The Door Lock will engage and the selected cycle will begin.

- **TIP** During the cycle, the knobs WILL NOT move. The 'STATUS LED's' will let you know the progress of your cycle.
- **TIP** The door will STAY LOCKED for the duration of the wash AND dry cycles. To open the door during a cycle, see LOWER-LEFT.

IMPORTANT

NEVER EXCEED RECOMMENDED AMOUNTS (SEE 'LAUNDRY AIDS' ON THIS PAGE). NEVER USE FABRIC SOFTENER SHEETS. IF USING LIQUID DETERGENT, USE NO MORE THAN 1/4 TO 1/2 TBSP PER LOAD.

ADD-AN-ITEM / PAUSE



To open the door without cancelling the current cycle, press the ON-OFF button once. Press ON-OFF again to resume the cycle. *This feature not always available.

CANCEL A CYCLE / RESET



Press and HOLD the START button to cancel the cycle and clear/reset the controls.

MORE COMBO TIPS

- **Always use fabric softener.** Using softener assures that the laundry falls easily from the drum after high spin and tumbles freely during the dry cycle.
- ONLY use 'Cotton Heavy Duty' cycles for HEAVY cottons (towels, jeans, etc.)
- For items that may wrinkle, use 'LOW SPIN' in wash and/or 'LOW HEAT' with 'Synthetics Dry.'
- For mixed loads, remove items that may wrinkle while still damp (dress shirts, etc.) Hand press and hang them. Then, continue drying the rest of the load (underwear, towels, etc.)
- After washing, shake out LARGE ITEMS (pants, sheets, etc.) Loosely fold them and place them back in the drum. Then start a Dry cycle. This will improve drying times and reduce fabric wrinkling.

FOR BEST DRYING

Your washer-dryer operates on 110V and has a 1300W dryer. It will take longer to dry than a traditional dryer (which operates on 220V). For best drying results, follow these tips:

- Keep the **door closed** during the dry cycle. This conserves energy by trapping heat,
- Use a **LOW SUDSING (HE)** detergent,
- Use **FABRIC SOFTENER** or a detergent with built-in softeners,
- **DO NOT OVERLOAD** the drum,
- **DO NOT OVER DRY** your laundry. Moisture is what makes fabrics soft and fluffy.

Doing laundry in a Combo

- **Don't let laundry pile up.** Keep up with laundry by doing a small load every day or two. Make it part of your routine to throw a load in after your workout or before you go to bed and let your Splendide do the rest!
- Because your washer-dryer is **front-loading and operates on 110V**, cycle times may be longer than what you're used to: 40 to 80 minutes to wash. 90 to 110 minutes to dry.
- Your washer-dryer is extremely efficient. You might not be able to see water in the drum during wash. **This is NORMAL.**
- **Always use fabric softener** or detergent with built-in softeners for WASH-TO-DRY LOADS. Using softener assures that the laundry falls easily from the drum after high spin and tumbles freely during the dry cycle.
- When the wash-to-dry cycle is complete the door will unlock and both the 'DRY' and 'DOOR LOCK' LED's will flash SLOWLY. **This is normal.**

What if I have a ventless dryer?

If your washer-dryer is ventless, (Model 7100XC) and uses 2.5 gal. of water* per hour to DRY laundry. When you remove items after the self-condensing drying process, they may feel slightly damp. THIS IS NORMAL. Simply shake items out to allow any steam to dissipate (a few seconds) before folding or hanging them as you usually would. *NOTE: **Splendide's self-condensing drying process will not add heat or humidity to the surrounding area.**

Where's the lint filter?

Splendide's are so gentle, they produce very little lint. There's no lint filter for you to clean because a specially designed self-cleaning pump does the work for you. **However, if your washer-dryer is vented (Model 2100XC)**, it's recommended that you occasionally, go outside and check the dryer vent for proper airflow. Assure that the vent and ducting are lint-free.

Optional RV/Marine Winterization Instructions

If your Splendide is installed in a vehicle and you are currently pumping antifreeze through your fresh water system, you can follow these steps to winterize your washer-dryer (if not, skip to steps below):

- | | |
|-------|--|
| Start | <ol style="list-style-type: none"> 1. With machine power OFF, turn WASH TEMP knob to 'HOT'; 2. Advance Cycle Selector to position '3'; 3. Press ON/OFF button, then press START. Let machine fill until the drum turns (could take up to 1 to 2 minutes); 4. Press ON/OFF button to turn power OFF; 5. Advance Cycle Selector to 'Spin'; 6. Press ON/OFF button, then press START. |
| END | <ol style="list-style-type: none"> 7. After letting antifreeze drain completely from drum, press the ON/OFF button to turn power OFF. FINISHED. |

To winterize your washer-dryer installed in a vehicle,

- | | |
|-------|--|
| Start | <ol style="list-style-type: none"> 1. With washer-dryer power OFF, pour ½ quart of RV-type antifreeze into washer drum; 2. Close door. Advance Cycle Selector to 'Spin'; 3. Press ON/OFF button, then press START. let the washer-dryer run for 1 to 2 minutes; 4. Press ON/OFF button to turn power OFF. |
| END | <ol style="list-style-type: none"> 5. Unplug washer-dryer from electrical outlet (or disconnect power); 6. Turn water supply faucets OFF. Disconnect inlet hoses from faucets; 7. Drain remaining water from the hoses. FINISHED. |

To use your washer-dryer again,

- | | |
|-------|---|
| Start | <ol style="list-style-type: none"> 1. Reconnect water inlet hoses to corresponding HOT/COLD faucets. Turn faucets ON. <i>NOTE: Check water inlet hoses and pump periodically (see Users Guide);</i> 2. Plug washer-dryer into appropriate electrical outlet (see Users Guide) - OR reconnect power supply; 3. With washer-dryer power OFF, pour 1/2 TBSP. of powder detergent (or liquid equiv.) into compartment '2' inside Dispenser Drawer; 4. Advance Cycle Selector to position '9'; 5. Press ON/OFF button, then press START. |
| END | <ol style="list-style-type: none"> 6. Allow machine to run through the complete cycle to clean out any remaining antifreeze. FINISHED. |

You'll reduce your carbon footprint and get outstanding results in your Splendide,

when you use our specially formulated, all-natural HE laundry powder (Splendide Premium Laundry Powder, #1005). Available direct from Splendide at 1-800-356-0766.


www.splendide.com